

babyhug™

baby stroller

WARNING

- 1) Please go through the manual before using the product.
- 2) Never leave your baby unattended in the stroller.
- 3) Before using the product, make sure all the locking systems are inspected and secure.
- 4) This product is suitable for children from 0 to 36 Months and weighing up to 25 Kg.
- 5) This product is not suitable for running or skating.
- 6) Do not allow the baby to stand or sit on the foot rest.
- 7) Make sure to lock all the brakes whenever stroller is parked.
- 8) Always use 5 point safety harness.
- 9) Please keep the product away from fire.
- 10) Please use the product on smooth and even surface.

Imported For & Marketed By:

Brainbees Solutions Pvt. Ltd.
Rajashree Business Park, Plot No: 114,
Survey No. 338, Tadiwala Road,
Near Sohrab Hall, Pune - 411 001

Customer care:

☎ 020 30556310

✉ customercare@brainbees.com

Made in PRC

Age Group
0 to 36
Months

Carrying Capacity
UPTO 25 Kg

User Manual

Cosy Cosmo Stroller

Style Code: BGST004



babyhug™


baby stroller

■ Cushioned Seat

■ Reversible Handle

■ Swivel Wheels


■ Easy & Compact Fold

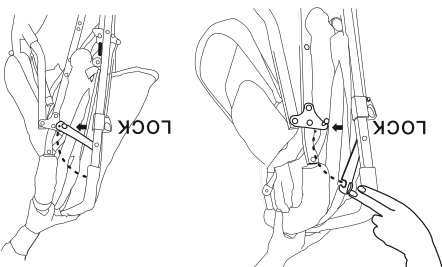

To Fold the Stroller
Make sure backrest is in its most upright position, depress (push down) the locking bar which will release the locking hooks. Finally, push towards the handle to fold the stroller.




To Fold the Stroller
B. To release the wheels simply lift up the tabs larger area of the wheels will be in back. Lock in place to help eliminate excess wobbling

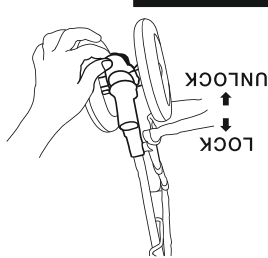


Use Of Swivel Wheels
A. When riding on a smooth road the swivel wheels make the stroller easier to move. For riding on a rough or rocky roads wheels can be adjusted to a fixed position by pushing down the tabs on the wheels




To Adjust Footrest
To the up position (level with the seat) - Lift up on the footrest and seat the supporting framework into the position underneath it. To put the footrest down - Simply lift up the footrest until the supporting framework falls and lay the footrest down.

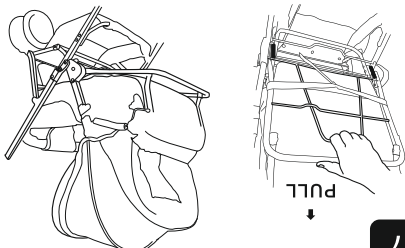


To Adjust Recline Position
Pull up the control wire behind the seat and lower the backrest to a desired position. Reverse these steps to return to the upright position.

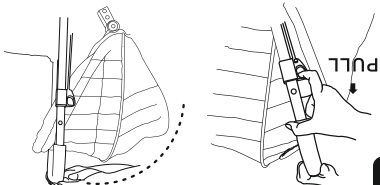


Use Of Reversible Handle
Stroller can be used as both - a carriage and a stroller by changing the position of the reversible handle. To reverse the handle pull the 'hook with finger slot' available at the both sides of handle. Move handle to the opposite direction until you hear a click sound. Note: Make sure your child's hands are inside the stroller before moving the handle to avoid any injuries.

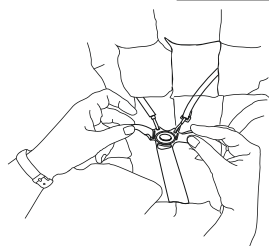


To Secure Child
Carefully place your child in the stroller. Bring safety belt around the child's waist and secure it with the buckle. Push the button to release the buckle.

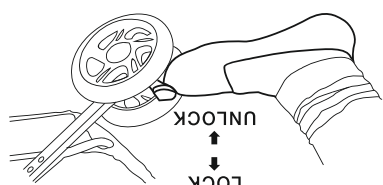


To Use Brakes
Step and push down the brake pedal as shown in the image. Always use both the brakes when stroller is parked, and when placing child in and out of the stroller. Remember to lift up the brake pedal to unlock before moving the stroller.

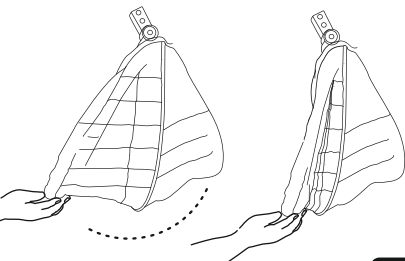

To Adjust Canopy
To adjust the canopy: Pull the canopy outwards and adjust it to the required position.

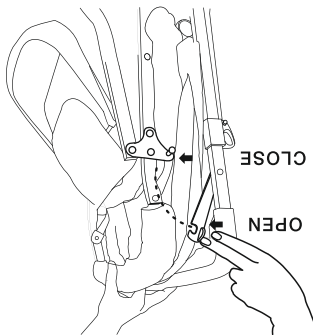

To Open the Stroller
Gradually pull the handlebar and push open the stroller until you hear a click as the stroller opens..

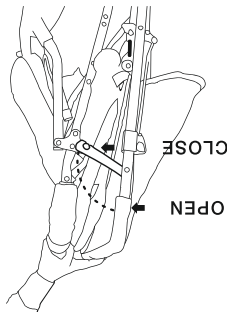

To Open the Stroller
Release the locking latch and unfold the stroller.