**Warning:**

- This tricycle is suitable for 18-36 month old children.
- Must be used under adult's supervision only.
- Must be installed by an adult only.
- Do not ride on slope and bumpy surface. Not to be used on heavy traffic roads.
- Do not ride during rain, strong wind or snowing weather.
- Please make sure all the screws are tightened when assembling.
- Please dispose the plastic bags soon after you open the package. Keep away from children to avoid danger of asphyxia

**Maintenance:**

- Please use dry cloth to wipe clean
- Regularly check for any loose screws or damage parts.
- Avoid over loading the tricycle beyond the weight capacity


**Imported & Marketed By**
Brainbees Solutions Pvt. Ltd.
Corporate & Registered Office Address:
Rajashree Business Park, Plot No: 114,
Survey No. 338, Tadiwala Road,
Near Sohrab Hall, Pune 411 001

**Customer Care :**
020-46608179
customercare@brainbees.com

**Customer Care Address:**
Same as Importer's address


Made in China

18 to 36 Months | Carrying Capacity up to 25 kg

# User's Manual

# Babyhug Pluto Tricycle

Style Code : BGTB003

babyhug®
baby tricycle

- Parental Push Bar
- Large Front Wheel
- Strong & Sturdy Frame

Please read the instructions manual thoroughly before using the products and keep for future reference

## Assembly

## A: Rear wheel assembly

**Installing the rear wheel 1:**
Insert the rear end of the shaft into the rear wheel, put a nut at the end and then put the back shaft into the frame beam.

**Installing the rear wheel 2:**
Insert the rear end of the shaft through another rear wheel, cover with a nut, and tighten with wrench on both ends of the rear axle. Fix the rear wheel cover.

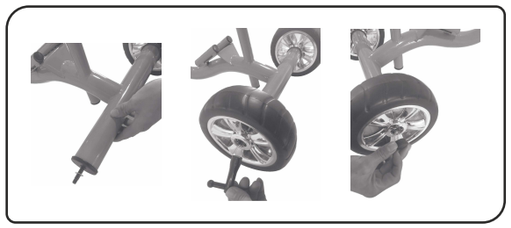

**Installing the mudguard and the handle:**
Fix the front fork with the mudgaurd, put the spring on the top of the fork, insert the front fork into the front of the frame, Insert the handle bar and fix it with screws.
Please note: Since the spring is used for fastening, while the handle is installed, the frame should be pressed down so that the hole on the front fork and the hole in the tap can be accessed for the screw.

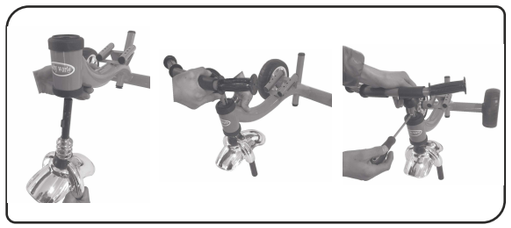

**Installing the front wheel:**
Place the plastic pieces on both sides of
the front wheel on the front fork and fasten with screws.

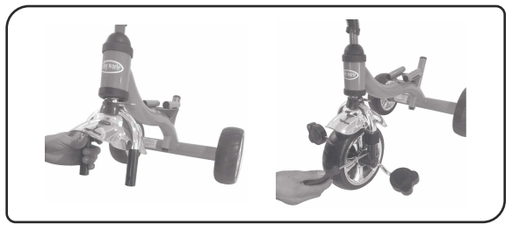

**Installing the seat:**
Place the seat on the seat plate, and fix the screws at the bottom.

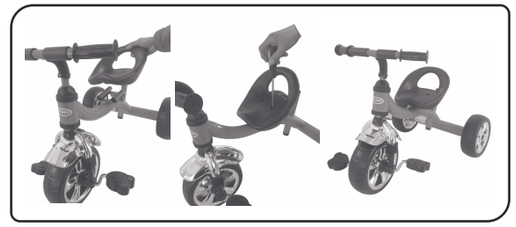

**Installing the push handle 1:**
Remove the bush on the pipe of the handle, insert the lower part of the push handle from the bottom, up to the handle pipe of the frame, Cover the middle of the handle with the HAFU and then set the middle of the handle to the lower part of the push handle.

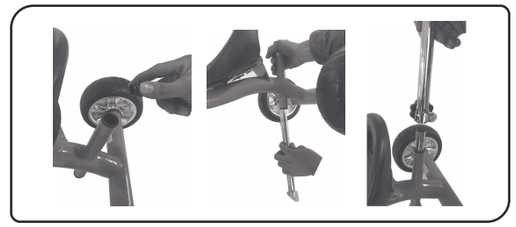

**Installing the push handle 2:**
After aligning the two screw holes in the middle part of the push handle and the lower part of the push handle,put the screw then lock on. Screw the plastic nut on the HAFA.

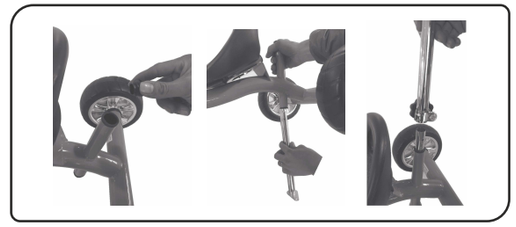

**Installing the push handle 3:**
Put the quick release screw on the middle of the handle, cover the upper part of the handle, then lock the quick release screw.

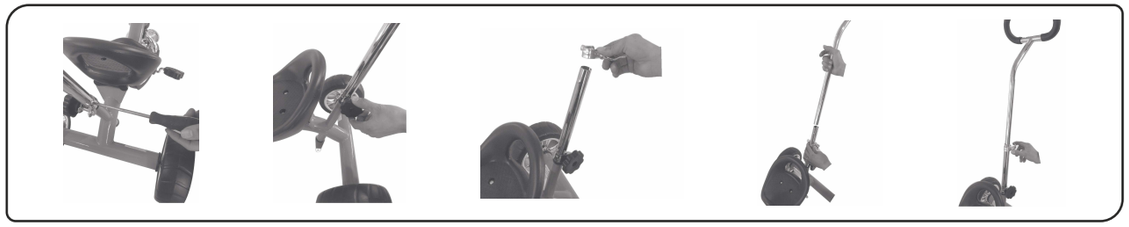

**Installing the steering wire:**
The front end of the steering wire is inserted into the hole in the front of the frame,with a nut lock, insert the back end into the hole in the iron plate of the lower part of the push handle and lock it with a nut.

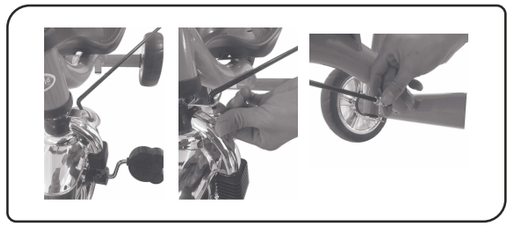

**Installation completed**